



1. Take off the cover




2. Take off the backend...don't forget to loosen the fan connector

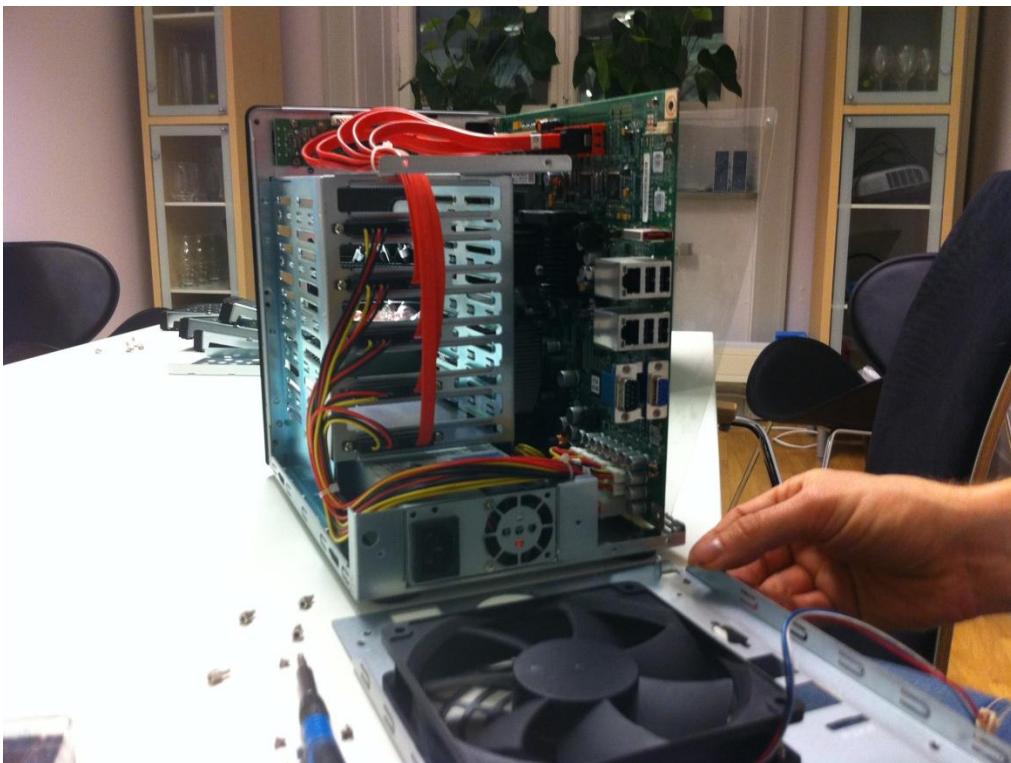


3. Disconnect the SATA connector on the motherboard end

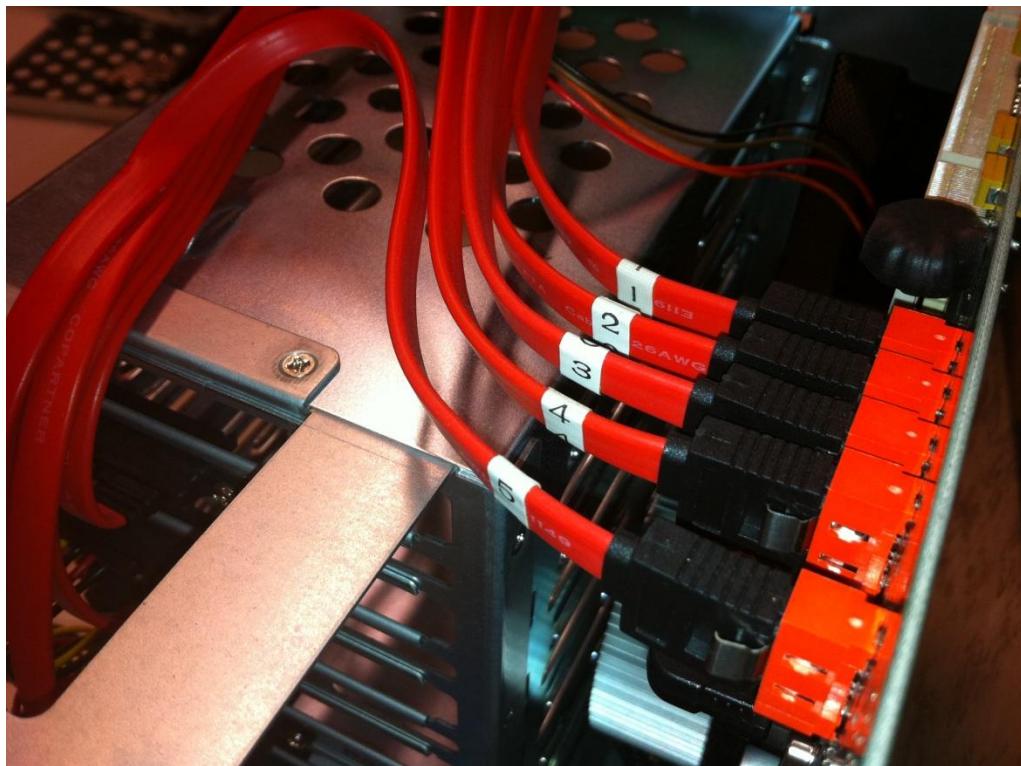

4. With the Sata cables disconnected you can easily lay down the motherboard on the table

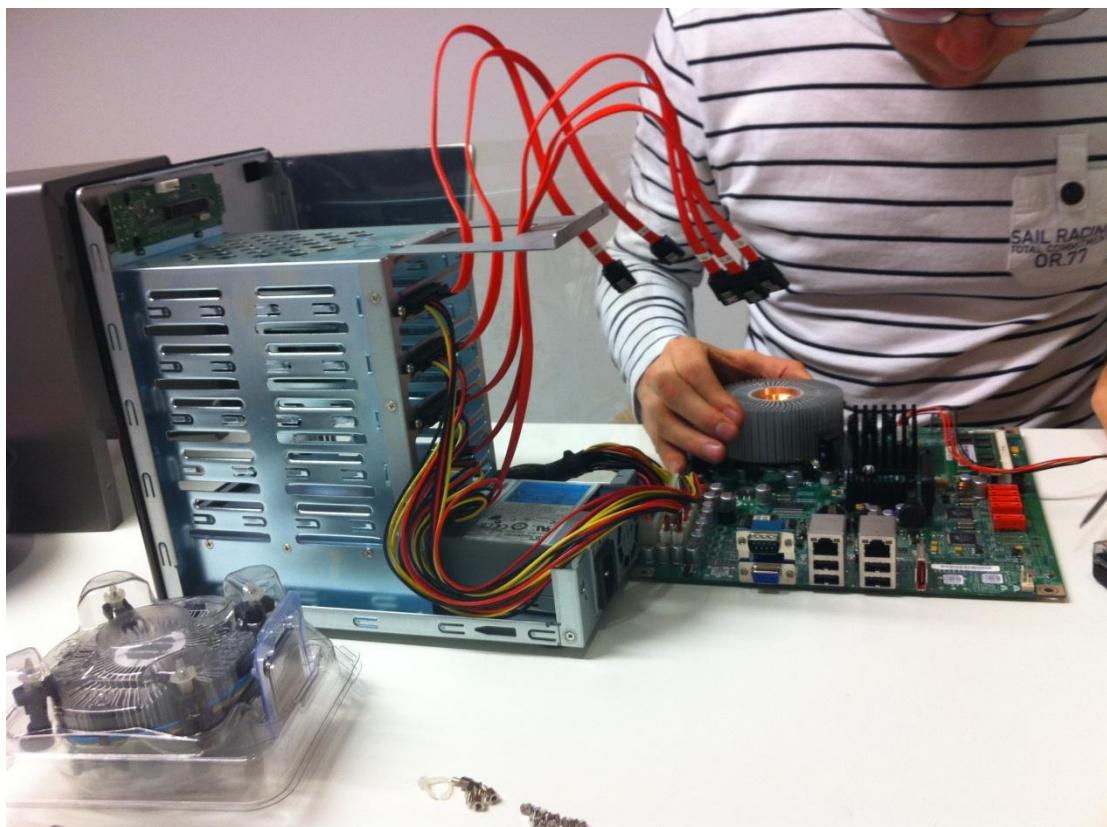

5. Remove the CPU and really good looking heatsink

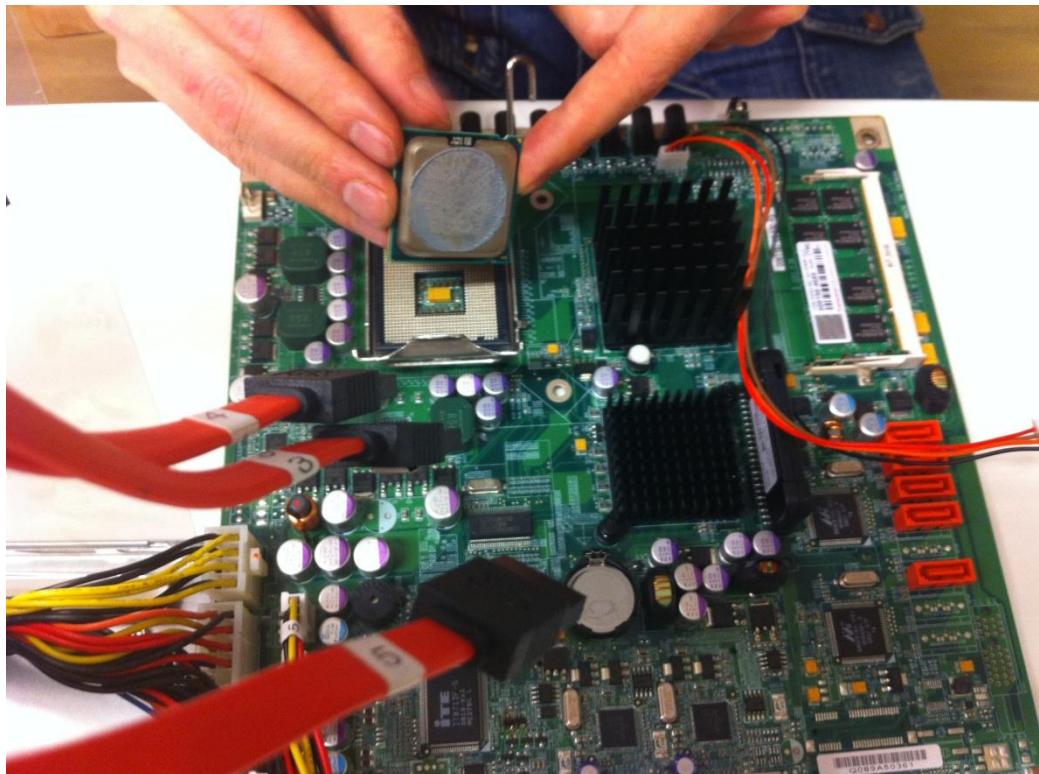

6. Put the new CPU in place and fasten the new intel stock heatsink, be careful not to bend the motherboard....and wash your hands before you touch the back of the motherboard or wear gloves



This is the CPU i replaced the stock Celeron with, even the stock fan fittet nicely. I bought the CPU för 70 US-dollar....definitely worth it.

The fan is driven by the motherboards CPU-fan connector. The second chassis FAN connector operates the 180mm fan in the back



The original heatsink is a real piece of art ☺

There is more than enough space for the stock fan.

